

NORTON

SAINT-GOBAIN

clipper

Transforming
surfaces
...and beyond

CST 100/120 ALU

OPERATING INSTRUCTIONS

Translation of the original instructions





CE Declaration of conformity

The undersigned manufacturer:

SAINT - GOBAIN ABRASIVES S.A.
190, BD. J. F. KENNEDY
L-4930 BASCHARAGE

Declares that this product:

Masonry saw:	CST 100 115V – 350MM – 1.8 KW – 2800 RPM	Code: 70184601937
	CST 100 230V – 350MM – 2.2 KW – 2800RPM	70184602016
	CST 120 115V – 350MM – 1.8 KW – 2800RPM	70184602124
	CST 120 230V – 350MM – 2.2KW – 2800 RPM	70184602125

is in conformity with the following directives:

- **"MACHINES" 2006/42/CE**
- **"ELECTROMAGNETIC COMPATIBILITY" 2014/30/UE**
- **"NOISE" 2000/14/CE**

and the European standard

- **EN 12418 – Masonry and stone cutting-off machines - Safety**

Valid for machines with serial number from: 1609XXXXX

Storage location of the technical documents:

Saint-Gobain Abrasives 190, Bd. J. F. Kennedy 4930 BASCHARAGE, LUXEMBOURG

This declaration of conformity loses its validity when the product is converted or modified without agreement.

Bascharage, Luxembourg, 01.10.2024

Fabrice Genuardi, executive officer and responsible for the technical file.
Bascharage, Luxembourg



Declaration of conformity

The undersigned manufacturer:

SAINT - GOBAIN ABRASIVES S.A.
190, BD J.F. KENNEDY
L- 4930 BASCHARAGE

Declares that this product:

Masonry Saws: CST 100 115V – 350MM – 1.8 KW – 2800 RPM	Code: 70184601937
CST 100 230V – 350MM – 2.2 KW – 2800RPM	70184602016
CST 120 115V – 350MM – 1.8 KW – 2800RPM	70184602124
CST 120 230V – 350MM – 2.2KW – 2800 RPM	70184602125

is in conformity with the following standard:

- ***Supply of Machinery (Safety) Regulations 2008***
- ***Electromagnetic Compatibility Regulations 2016***
- ***Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001***

and European standard:

- ***EN 12418 – Masonry and stone cutting-off machines – Safety***

Valid for machines with a serial number greater than: 240600024

Authorised Representative:

SAINT-GOBAIN ABRASIVES

Unicorn House • Unit 1, Amison Close

Redhill Business Park • Stafford • England • ST16 1WB

This declaration of conformity loses its validity when the product is converted or modified without agreement.

Bascharage, Luxembourg, 01.10.2024

Fabrice Genuardi, executive officer and responsible for the technical file.
 Bascharage, Luxembourg

CST: OPERATING INSTRUCTIONS

TABLE OF CONTENTS

<u>1</u>	<u>BASIC SAFETY INSTRUCTIONS.....</u>	<u>6</u>
1.1	<i>Symbols</i>	6
1.2	<i>Machine plate.....</i>	7
1.3	<i>Safety instructions for particular operating phases</i>	7
<u>2</u>	<u>MACHINE DESCRIPTION</u>	<u>8</u>
2.1	<i>Short description.....</i>	8
2.2	<i>Purpose of use</i>	8
2.3	<i>Layout</i>	8
2.4	<i>Accessories.....</i>	9
2.5	<i>Technical data.....</i>	10
2.6	<i>Statement regarding the vibration emission.....</i>	11
2.7	<i>Statement regarding noise emission.....</i>	12
<u>3</u>	<u>ASSEMBLY AND COMMISSIONING.....</u>	<u>13</u>
3.1	<i>Feet mounting.....</i>	13
3.2	<i>Tool assembly</i>	13
3.3	<i>Installing the cutting head stops.....</i>	13
3.4	<i>Electrical connections.....</i>	14
3.5	<i>Starting the machine</i>	14
3.6	<i>Water cooling system</i>	14
<u>4</u>	<u>OPERATING THE MACHINE</u>	<u>15</u>
4.1	<i>Site of work.....</i>	15
4.2	<i>Cutting material</i>	15
4.3	<i>General advice for the cutting</i>	16
<u>5</u>	<u>TRANSPORT AND STOCKING.....</u>	<u>17</u>
5.1	<i>Securing for transport.....</i>	17
5.2	<i>Transport procedure</i>	17
5.3	<i>Long period of inactivity.....</i>	17
<u>6</u>	<u>MAINTENANCE AND SERVICING.....</u>	<u>18</u>
<u>7</u>	<u>FAULTS: CAUSES AND CURES</u>	<u>19</u>
7.1	<i>Fault-finding procedures.....</i>	19
7.2	<i>Trouble-shooting guide.....</i>	19
7.3	<i>Circuit diagram.....</i>	20
7.4	<i>Customer service.....</i>	23
7.5	<i>Spare parts</i>	24

1 BASIC SAFETY INSTRUCTIONS

The CST is exclusively designed for the cutting of abrasive materials with NORTON diamond blades, mainly on construction sites.

Uses other than the manufacturer's instructions shall be considered as contravening the regulations. The manufacturer shall not be held responsible for any resulting damage. Any risk shall be borne entirely by the user. Observing the operating instructions and compliance with inspection and servicing requirements shall also be considered as included under use in accordance with the regulations.

1.1 Symbols

Important warnings and pieces of advice are indicated on the machine using symbols. The following symbols are used on the machine:



Read operator's instructions



 
Ear protection must be worn



Hand protection must be worn



Eye protection shall be worn










Rotation direction of the blade



Danger: risk of cut

1.2 Machine plate

Important data can be found on the following plate located on the machine:

 SAINT-GOBAIN 190, Bd. J.F. Kennedy L-4930 BASCHARAGE LUXEMBOURG	Code: Machine Code	Year: Year of production	 = Ø Maximum blade mm	  
	Mod: Machine Model	W= Weight kg	 = Ø Bore mm	
	EN: Safety standard	P= Power kW	 = Blade speed RPM	
	Type: Machine type	Serial N°: Serial number		

1.3 Safety instructions for particular operating phases

Before commencing work

- Before commencing work, make yourself familiar with the working environment at the place of use. The working environment includes: obstacles in the area of work and manoeuvre, the firmness of the floor, necessary protection at the site relating to public thoroughfares and the availability of help in the event of accidents.
- Install the machine balanced on a flat and stable ground.
- Check for correct mounting of the blade regularly.
- Immediately remove damaged or badly worn blades, as they endanger the operator whilst rotating.
- Only fit NORTON diamond blades to the machine! The use of other tools can damage the machine!
- Firmly press the part to be cut against the machine abutting to prevent it from moving during cutting operation.
- Use the machine only with closed and fixed blade guard..
- Check carefully the documentation about diamond blades to find the one who best meet the requirement with your application.

Machine with electric motor

- Turn off the power of the CST and disconnect it from the network before any work on the machine itself.
- Avoid contact of electrical connections with water projections or moisture.
- The CST must be absolutely correctly grounded. In case of doubt, have the electrical connections checked by a qualified electrician.
- Turn off the CST main power supply if it stops with no apparent reason. Only a qualified electrician is authorized to investigate and resolve the issue.
- To shut down the machine in case of danger, push the red button on the switch.

2 MACHINE DESCRIPTION

Any modification, which could lead to a change in the original characteristics of the machine, may be done only by Saint-Gobain Abrasives who shall confirm that the machine is still in conformity with the safety regulations.

2.1 Short description

CST type Masonry saw is a machine with fixed table and mobile head. Robust and powerful, it allows precise cuts in a wide variety of building materials. It can be used on construction and also on industrial sites. Combined with NORTON diamond blades, it offers a high degree of performance and cutting quality for large tiles, window sills or stair steps.

2.2 Purpose of use

The machine is designed for wet cutting of a large range of building and refractory materials, or tiles. **It is not designed for cutting wood or metals.**

2.3 Layout



Frame (1)

Jig-welded steel construction, the frame is robust and resistant. The side posts of the machine ensure that the rail is parallel to the table. The rails (4) assembly can also be tilted to 45° to make bevel cuts. The rail (2) guides the cutting head over the table.

Blade guard (3)

Jig-welded steel construction with 350mm-diameter blade capacity, which offers maximum operator protection and increased visibility of the work piece.

Incorporated in the blade guard is an outer metal cover, which can be easily hinged open. This allows easy access to shaft for inspection and blade replacement when motor is switched off, while fully protecting the blade when in operation. An arrow on the blade guard indicates the direction of the blade rotation.

Emergency stop button (5)

The red button stops the motor. It is also an emergency stop button.

2.4 Accessories

Many accessories are available for the CST:

- A table extension which allowed user to cut bigger materials.
- A table roller extension which helped successive cut on long material.
- An additional cutting stop.
- A long angular cutting guide which provide better precision during the cut.

2.5 Technical data

Code	70184601937	70184602016	70184602124	70184602125
Description	CST 100 ALU 230V	CST 120 ALU 230V	CST 100 ALU 115V	CST 120 ALU 115V
Power	2,2 kW		1.8 kW	
Voltage	230V 1~		115V 1~	
Motor protection	IP 54			
Sound pressure level	73,5 dB (A) (refer to ISO EN 11201)			
Sound energy level	88,5 dB (A) (refer to ISO EN 3744)			
Cutting length	1000 mm	1200 mm	1000 mm	1200 mm
Max. Cutting depth	110 mm			
Blade speed (RPM)	2800 min ⁻¹			
Blade diameter	350mm			
Blade bore	25.4 mm			
Flanges diameter	110 mm			
Length	1270 mm	1600 mm	1270 mm	1600 mm
Width	660 mm			
Height (with feet)	1350 mm			
Height (without feet)	780 mm			
Water pan capacity	62 L	71 L	62 L	71 L
Weight (total)	72 kg	79 kg	72 kg	79 kg

2.6 Statement regarding the vibration emission

Declared value of vibration emission following **EN 12096**.

Machines Modèle / code	Measured value of vibration emission at m/s ²	Uncertainty K m/s ²	Tool used Model / code
CST 100 ALU 230V / 70184601937 CST 100 ALU 115V / 70184602124 CST 120 ALU 230V / 70184602016 CST 120 ALU 115V / 70184602125	<2.5	0.5	Duo Granit

- The vibration value is lower and does not exceed 2.5 m / s.
- Values determined using the procedure described in the standard **EN 12418**.
- The measurements are made with new machines. Actual values may vary with site conditions, in terms of:
 - Materials worked
 - Wear Machine
 - Lack of maintenance
 - Inappropriate tool for application
 - Tool in poor condition
 - Unskilled operator
 - Etc...
- The exposure time to vibration is based on the performance of work (related to the adequacy Machine / Tool / worked material / operator)

When evaluating risks due to hand-arm vibration, you need to take into account effective usage at rated power of machine during a full day of work; quite often you will realise that effective utilisation time represents around 50% of overall duration of work. You have to consider, of course, breaks, water feeding, preparation of work, time to move the machine, disk mounting...

2.7 Statement regarding noise emission

Declared value of noise emission following **EN ISO 11201** and **NF EN ISO 3744**.

Machine Modèle / code	Sound Pressure level $L_{P_{eq}}$ EN ISO 11201	Uncertainty K (Sound Pressure level $L_{P_{eq}}$ EN ISO 11201)	Sound power level $L_{W_{eq}}$ NF EN ISO 3744	Uncertainty K (Sound power level $L_{W_{eq}}$ NF EN ISO 3744)
CST 100 ALU 230V / 70184601937 CST 100 ALU 115V / 70184602124 CST 120 ALU 230V / 70184602016 CST 120 ALU 115V / 70184602125	73.5 dB(A)	2.5 dB(A)	88.5 dB(A)	4 dB(A)

- Values determined using the procedure described in the standard **EN 12418**.
- The measurements are made with new machines. Actual values may vary with site conditions, in terms of:
 - Wear Machine
 - Lack of maintenance
 - Inappropriate tool for application
 - Tool in poor condition
 - Unskilled operator
 - Etc...
- Measured values relate to an operator in normal use, as described in the manual position.

3 ASSEMBLY AND COMMISSIONING

The machine is delivered fully equipped. It is ready for operation when you mount the diamond blade, the handles and the conveyor cart and after you connect to the appropriate power supply.

3.1 Feet mounting

Use the provided screws to mount the feet on the frame.

3.2 Tool assembly

Only NORTON blades should be used. The maximal diameter for a blade is 350mm.

All tools used must be selected with regard to their maximum permitted cutting speed for the machine's maximum permitted rotation speed. Before mounting a new blade into the machine, switch off the machine and isolate it from the main source of electricity.

To mount a new blade, follow these steps:

- Loosen the screw in front of the blade guard and disconnect the water hose on its the left side and open it.
- Loosen the hexagonal nut on the blade shaft (**attention:** left threaded), which holds the removable outer flange, with the supplied wrench.
- Remove the outer flange.
- Clean the flanges and blade shaft and inspect for wear.
- Mount the blade on arbor ensuring that direction of rotation is correct. Wrong direction of rotation blunts the blade quickly.
- Replace outer blade flange.
- Tighten the hexagonal (**attention:** left threaded), nut with the supplied wrench.
- Close the blade guard, retighten the screw on the front of the blade guard and reconnect the water hose.

ATTENTION: The blade bore must correspond exactly to the diameter of the blade shaft. Cracked or damaged bore is dangerous for the operator and for the machine.

3.3 Installing the cutting head stops

ATTENTION, if the stops are incorrectly positioned, you risk cutting the machine frame.

When you change the blade, you must do set up the blocking ring of the cutting head to not cut the frame of the machine. Please check regularly if the stops have not moved.





When you receive the machine, the cutting head is lock by 2 blocking rings on the guiding bars. To set up the blocking rings, you need to :

- 1) Unlock the blocking rings.
- 2) When the blade is in place, Lower the cutting head until the segments are below table level.
- 3) Push the cutting head in one direction until there is about 2cm between the cutting head and the machine frame. (In function of the blade)
- 4) Push the blocking ring against the cutting head et lock the ring to set up the stops to avoid cutting the frame.
- 5) Repeat steps 3 and 4 for the other side of the machine.

The cutting head stops is now set up.

3.4 Electrical connections

Check that,

- The voltage/phase supply corresponds to the information indicated on the motor plate.
- Available power supply must have ground connection in conformity with safety regulations.
- The connecting cables should have at least a 2. 5mm²-section per phase.

3.5 Starting the machine

Press the green button to start the machine. Press the red one to stop it. The red button is also an emergency stop button.

400V Motor: Direction of rotation

The direction of rotation is indicated on the blade guard. If the direction of rotation does not correspond to the direction shown by the arrow, then reverse the motor polarity by turning the phase inverter inside the male plug with a screwdriver.

3.6 Water cooling system

- Fill the water pan with clean water to approximately 1cm from top (ensure that bottom of pump is fully immersed in water).
- Open water-tap at blade guard (note that handle on water-tap should be in line with water-flow).
- Ensure that water is flowing freely in the circuit and is delivered adequately to both sides of the blade, as insufficient water supply may result in premature failure of the diamond blade.
- The water pump must never run without water. Always make sure that there is enough water in the pan and refill if necessary.
- In case of frost, empty the water-cooling system from its water.

4 OPERATING THE MACHINE

In this part, you will find some safety tips to use the machine.

4.1 Site of work

4.1.1 Sitting the machine


- Remove from the site anything, which might hinder the working procedure!
- Make sure the site is sufficiently well lit!
- Observe manufacturer's conditions for connecting to power supplies!
- Place electric cables in such a way that damage by the device is excluded!
- Make sure you have a continual adequate view of the working area so you can intervene in the working process at any time!
- Keep other staff out of the area, so you can work securely.

4.1.2 Space required for operation and maintenance

Leave 2 m around the machine for usage and maintenance of the CST.

4.2 Cutting material

To use the CST correctly and avoid any contact with the cutting tool, you must face it with one hand on one of the 3 handles of the cutting head, and the other ready to shut the machine down in case of emergency. Always keep your hands away from the moving blade.

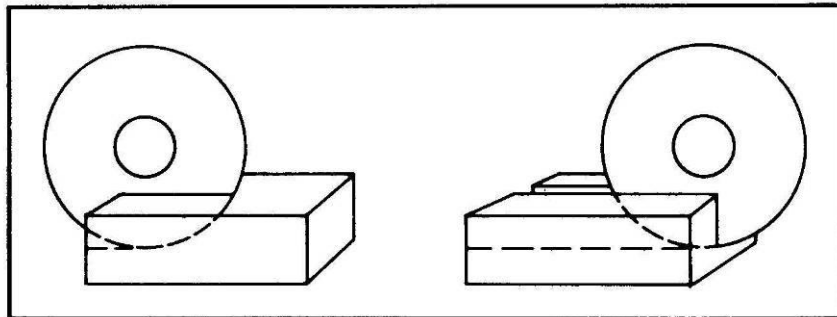

In full depth or fixed cutting, the cutting head is locked in a fixed position and the material is pushed into it as shown.

- Lower the cutting head thanks to the hand wheel to the desired cutting depth. In “through cutting”, lower cutting head until blade periphery reaches max. 3mm under the surface of the conveyor cart (for maximal cutting depth).
- Put the material on the table and maintain it firmly against the butting. (or the cutting guide when appropriate).
- Pull the cutting head slowly and without undue pressure towards the material.
- You can tilt the head for bevel cuts. For this purpose, untighten the two black buttons on each side of the frame, and tilt the head to the desired position (from 0 to 45°). Tighten then the two buttons.
- To cut thicker materials, you can cut a first side, and then reverse it to cut the total depth. You can cut materials until 220mm depth. (370mm for the 500mm blade versions).

4.3 General advice for the cutting

- The CST is designed to cut materials with maximal dimensions of :

Modèle	CST 120 ALU 115V	CST 120 ALU 230V	CST 100 ALU 115V	CST 100 ALU 230V
∅ disque	350 mm	350 mm	350 mm	350 mm
Dimensions des pièces à couper (L x l x h)	1200 x660 x120	1200 x660 x120	1000 x660 x120	1000 x660 x120
Poids maximal des pièces à couper	80 kg	80 kg	66 kg	66 kg

- The width of the table and of the material can be increased by adding a table extension.
- Before commencing work make sure tools are firmly seated!
- Select the right tools as recommended by the manufacturer depending on the material to be worked, the working procedure (wet cut) to be carried out and the required efficiency.
- Apply cooling water continuously whilst cutting and in good time! Make sure the water pan contains enough water.
- Use Only Norton diamonds blades. Others tools can damage the machine.
- If the thermal protection trips, allow the thermal protection to cool down. Wait a few minutes to allow the motor to cool down before restarting the machine.

5 TRANSPORT AND STOCKING

5.1 Securing for transport

Before transporting or lifting the machine, always remove the blade and empty the water pan. Also lock the cutting head on the rail. To do so, move the head in the middle of the rail and tighten the knob screw until the cutting head is secured on the rail.

5.2 Transport procedure

Conform yourself to work regulations, in order to transport the machine safely. The machine is fitted with 4 foldable handles. Fold these out of the machine to transport it easily with the wheels on the rear foots.

The machine is also designed to be raised using a crane by insert hooks of lifting on the corner holes. The machine can also be transported by a forklift truck while passing the forks under the water vat.

5.3 Long period of inactivity

If the machine is not going to be used for a long period, please take the following measures:

- Completely clean the machine
- Empty the water system
- Take the water pump out of the slurry and clean it thoroughly.

The storage site must be clean, dry and at a constant temperature.

6 MAINTENANCE AND SERVICING

To ensure a long-term quality from the cutting with the CST, please follow the maintenance plan below:

		Begin of the day	During the changing of tool	End of the day or more often if required	Every week	After a fault	After a damage
Whole machine	Visual control (general aspect, watertightness)						
	Clean						
Flange and blade fixing devices	Clean						
Motor cooling fans	Clean						
Water pump	Clean						
Water pan	Clean						
Cutting table	Clean						
Water hoses and nozzles	Clean						
Water pump filter	Clean						
Rail	Clean						
Motor housing	Clean						
Reachable nuts and screws	Tighten up						

Maintenance of the motor

Always perform the maintenance of the motor with the machine isolated from the electrical supply.

Cleaning of the machine

Your machine will last longer if you clean it thoroughly after each day of work, especially water pump, water pan, cutting head rail, motor and blade flange. To easily clean the water pan, open the table. Always clean the machine when any cutting dust and debris is still fresh; never allow the deposits to solidify.

Lubrication

The CST uses life-lubricated bearings. Therefore, you don't need to lubricate the machine at all.

7 FAULTS: CAUSES AND CURES

7.1 Fault-finding procedures


Should any fault occur during the use of the machine, turn it off, and isolate it from the electrical supply. Any works dealing with the electrical system or supply of the machine can only be carried out by a qualified electrician.

7.2 Trouble-shooting guide


Trouble	Possible source	Resolution
Motor is not running	No electricity	Check the electrical supply (fuse for example)
	Connection cable section too small	Change connection cable
	Defective connection cable	Change connection cable
	Defective switch	CAUTION : can only be solved by qualified electrician
	Defective motor	Change motor or contact motor manufacturer
Motor stops during the cutting, but can be restarted after a short period (overload protection)	Cutting advance too quick	Cut slowly
	Blade is blunt or glazed	Sharpen the blade in calcareous stone
	Defective blade	Change blade
	Wrong blade specification for the application	Change blade
No water on the blade	Not enough water in the pan	Refill the water pan
	Water tap is closed	Open tap on blade guard
	Water supply system is blocked up	Clean water supply system
	Water pump is not working	Change the pump

7.3 Circuit diagram


230V Motor

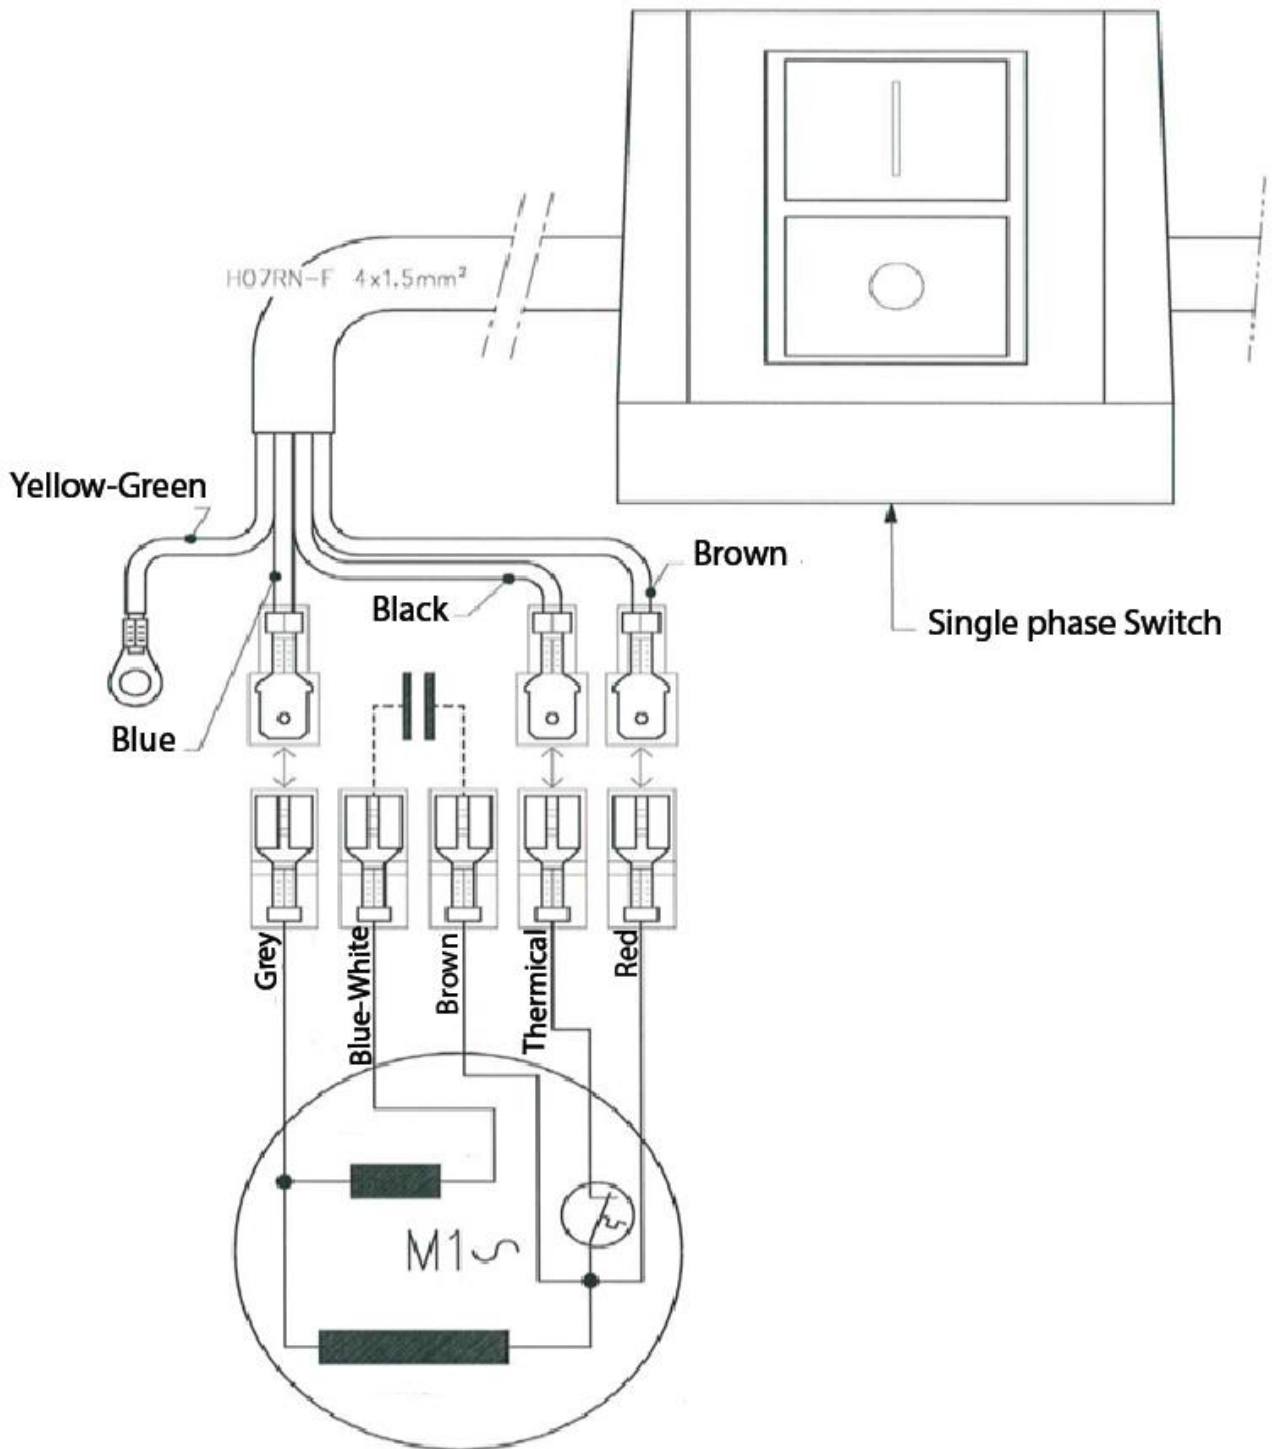

Detailed view of the circuit diagram Motor 230V

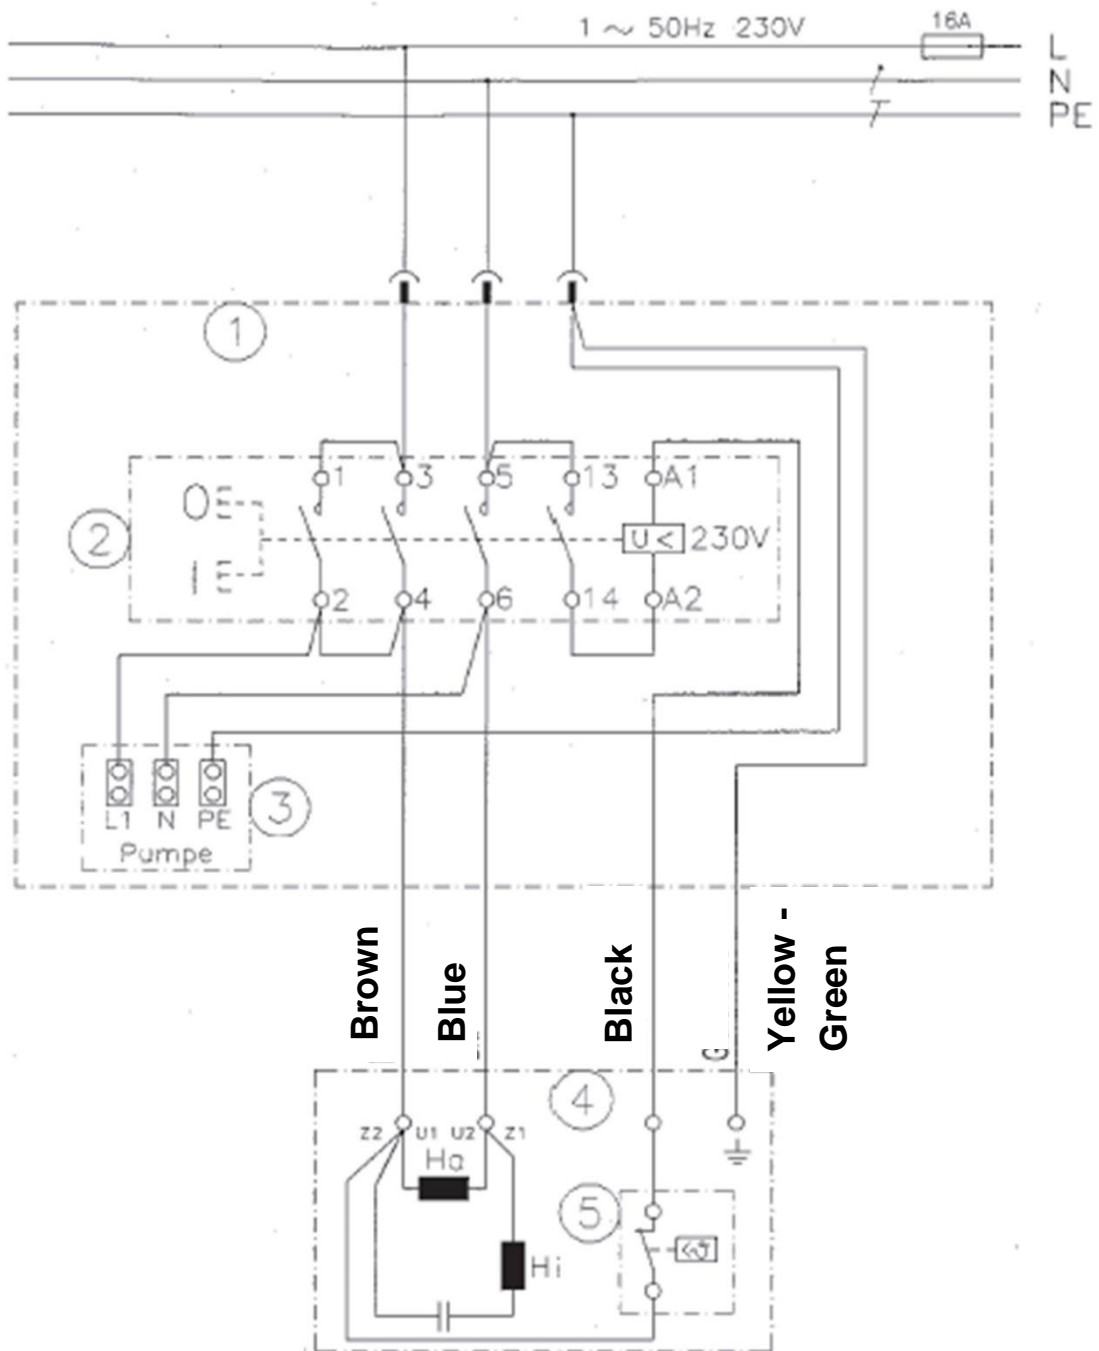

115V Single phase Motor

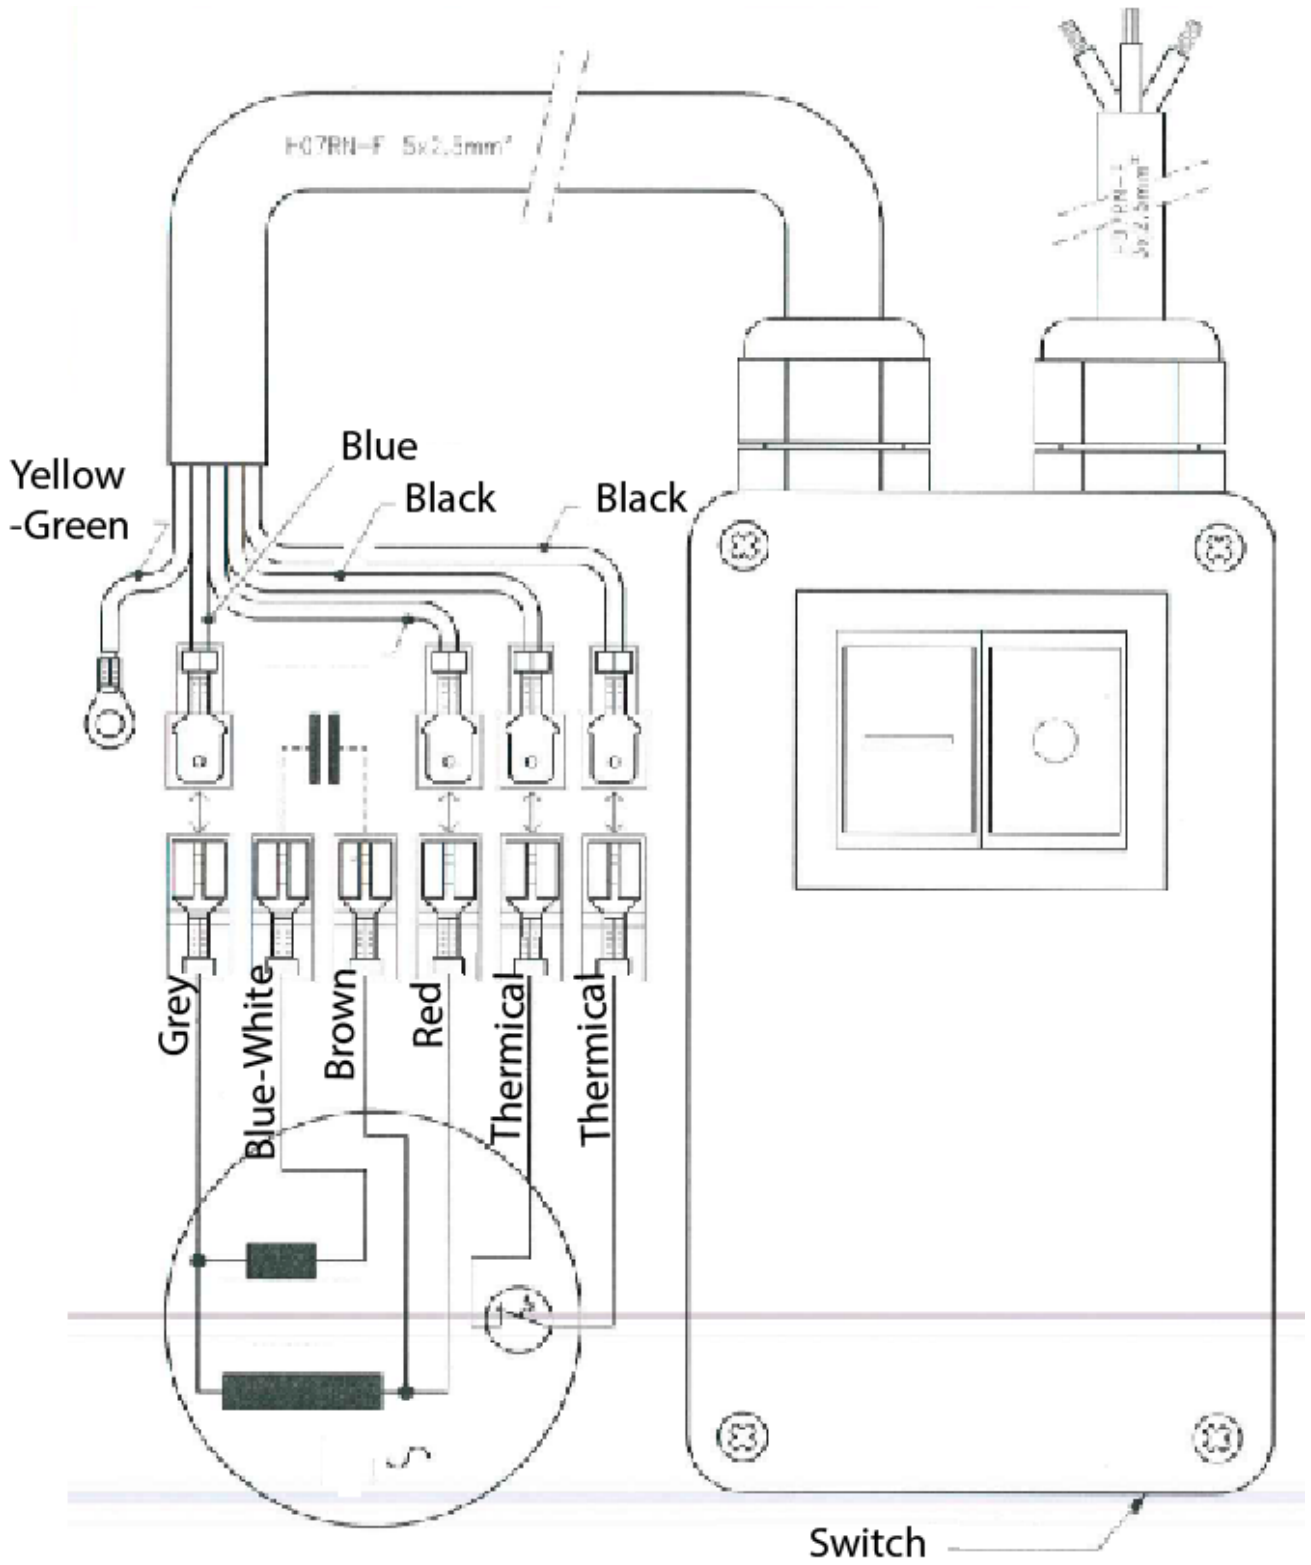

7.4 Customer service

When ordering spare parts, please mention:

- The serial number (7 digits).
- The code of the part.
- The exact denomination.
- The number of parts required.
- The delivery address.
- Please indicate clearly the means of transportation required such as "express" or "by air". Without specific instructions, we will forward the parts through the means which seem appropriate to us --- but which is not always the quickest way.

Clear instructions will avoid problems and faulty deliveries.

If not sure, please send us the defective part.

In the case of a warranty claim, the part must always be returned for evaluation.

Spare parts for the motor can be ordered with the manufacturer of the motor or with their dealer, which is often quicker and cheaper.

This machine has been manufactured by: Saint-Gobain Abrasives S.A.

190, Bd. J. F. Kennedy
L- 4930 BASCHARAGE
Grand-duché de Luxembourg.

Tel.: 00352-50 401-1

Fax: 00352- 50 16 33

<http://www.construction.norton.eu>

e-mail: sales.nlx@saint-gobain.com

7.5 Spare parts

In order to consult the spare parts lists, we invite you to visit the after-sales website of Norton Clipper by using the following address:

<https://spareparts.nortonabrasives.com>

For a quick access, you can also use the QR Code shown below using your mobile phone:



This electronic catalogue provides exploded views and spare parts lists for different machines designed by Norton Clipper so you can find references you need.

Guarantee can be claimed, and technical support obtained from your local distributor where machines, spare parts and consumables can be ordered as well:

SAINT-GOBAIN ABRASIVES
INDUSTRIEWEG 21
9420 ERPE-MERE
BELGIUM
TEL: +32(0) 2 267 21 00

SAINT-GOBAIN CONSTRUCTION PRODUCTS
CZ A.S
DIVIZE ABRASIVES
SMRČKOVA 2485/4
180 00 PRAHA 8
CZECH REPUBLIC
TEL: +420 255 719 326
FAX: +420 255 719 321

SAINT-GOBAIN ABRASIVES A/S
DYBENDALSVÆNGET 2,
DK-2630 TAASTRUP
DENMARK
TEL: +45 4675 5244

PO BOX 643706
FORTUNE TOWER OFFICE 2106
JLT BLOCK C
(NEXT TO METRO STATION)
JUMEIRA LAKE TOWER, DUBAI
UNITED ARAB EMIRATES
TEL: +971 4 431 5154
FAX: +971 4 431 5434

SAINT-GOBAIN ABRASIFS
RUE DE L'AMBASSADEUR - B.P.8
78 702 CONFLANS CEDEX
FRANCE
TEL: +33 (0)1 34 90 40 00
FAX: +33 (0)1 39 19 89 56

SAINT-GOBAIN ABRASIVES GMBH
BIRKENSTRASSE 45-49
D-50389 WESSELING
GERMANY
TEL: +49 (0) 2236 703-0
FAX: +49 (0) 2236 703-730

SAINT-GOBAIN ABRASIVES KFT.
1225 BUDAPEST
BÁNYALÉG U. 60/B.
HUNGARY
TEL: +36 1 371 22 50
FAX: +36 1 371 22 55

SAINT-GOBAIN ABRASIVI S.P.A
VIA PER CESANO BOSCONI 4
I-20094 CORSICO MILANO
ITALY
TEL: +39 02 44 851
FAX: +39 02 44 78 266

SAINT-GOBAIN ABRASIVES S.A.
190 RUE J.F. KENNEDY
L-4930 BASCHARAGE
GRAND DUCHE DE LUXEMBOURG
TEL: +352 50 401 1
FAX: +331 83 717 792
NO. VERT (FRANCE): 0800 906 903

SAINT-GOBAIN ABRASIFS, S.A.
2 ALLÉE DES FIGUIERS
AIN SEBAË - CASABLANCA
MOROCCO
TEL: +212 5 22 66 57 31
FAX: +212 5 22 35 09 65

SAINT-GOBAIN ABRASIVES BV
GROENLOSEWEG 28
7151 HW EIBERGEN
P.O. BOX 10
7150 AA EIBERGEN
THE NETHERLANDS
TEL: +31 545 466466
FAX: +31 545 474605

SAINT-GOBAIN ABRASIVES AS
KARIHAUGVEIEN, 89
0186 OSLO
NORWAY
TEL: +47 63 87 06 00
FAX: +47 63 87 06 01

SAINT-GOBAIN HPM POLSKA SP. Z O.O.
UL. NORTON 1, 62-600 KOŁO
62-600 KOŁO
POLAND
TEL: +48 63 26 17 100
FAX: +48 63 27 20 401

SAINT-GOBAIN ABRASIVOS, L. DA
ZONA INDUSTRIAL DA MAIA
I-SECTOR VIII, NO. 122
APARTADO 6050
4476 - 908 MAIA
PORTUGAL
TEL: +351 229 437 940
FAX: +351 229 437 949

SAINT-GOBAIN GLASS
BUSINESS UNIT ABRASIVI
PUNCT DE LUCRU : LOC.VETIS, JUD.
SATU MARE 447355
STR. CAREIULUI 11
PARC INDUSTRIAL RENOVATIO
ROMANIA
TEL: +40 261 839 709
FAX: +40 261 839 710

SG HPM RUS
58, F. ENGELS STR.
STROENIE 2
105082 MOSCOW
RUSSIA
TEL: +74 955 408 355
FAX: +74 959 373 224

SAINT-GOBAIN
ABRASIVES (PTY) LTD
2 MONTEER ROAD
ISANDO 1600
P.O. BOX 67
SOUTH AFRICA
TEL: +27 11 961 2000
FAX: +27 11 961 2184/5

SAINT-GOBAIN ABRASIVOS, S.A.
CTRA. DE GUIPÚZCOA, KM. 7,5
E-31195 BERRIOPLANO (NAVARRA)
SPAIN
TEL: +34 948 306 000
FAX: +34 948 306 042

SAINT GOBAIN ABRASIVES AB
GÅRDSFOGDEVÄGEN 18A
168 66 BROMMA • SVERIGE
SWEDEN
TEL: +46 8 580 881 00
FAX: +46 8 580 881 30

SAINT-GOBAIN INOVATIF MALZEMELER VE
ASINDIRICI SAN. TIC. AS.
ALTAYÇEŞME MAH. ÇAMLI SOK. NO:21 ESAS
OFISPAK KAT:9 34843
MALTEPE, İSTANBUL • TURKEY
TEL: 0090-216-217 12 50
FAX: 0090-216-442 40 74

SAINT-GOBAIN ABRASIVES LTD.
UNICORN HOUSE UNIT 1, AMISON CLOSE
REDHILL BUSINESS PARK
STAFFORD ST161WB
UNITED KINGDOM
TEL: +44 1785 279 553
FAX: +44 1785 213 487



Saint-Gobain Abrasifs
190 Rue J.F. Kennedy
L-4930 Bascharage
Grand Duché de Luxembourg
Tel: +352 50 4011
Fax: +331 83 717 792
no. vert (France) 0800 906 903

www.nortonabrasives.com/fr-fr