

TIME FOR REPAIR: **15 MINUTES** (NOT INCLUDING MOUNTING/ASSEMBLY)


HEADLIGHT REPAIR PROCESS

STEP 1 SANDING



STEP 2 POLISHING



DRY SAND WITH
NORTON PRO A275 P500
+SOFT INTERFACE

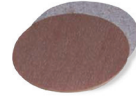


DRY SAND WITH
NORTON PRO A275 P800
+SOFT INTERFACE

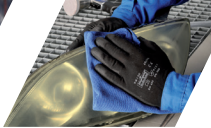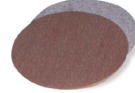


WIPE WITH
BLUE MAGNET
MICROFIBRE CLOTH



WET SAND WITH
NORTON ICE
1500 GRIT DISC

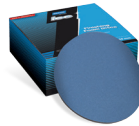

WET SAND WITH
NORTON ICE
3000 GRIT DISC

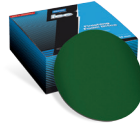

CLEAN THE SURFACE
WITH **BLUE MAGNET**
MICROFIBRE CLOTH



POLISH WITH
LIQUID ICE STEP 1 - QUICK CUT
AND WHITE FOAM HEAD



WIPE THE SURFACE
WITH **BLUE MAGNET**
MICROFIBRE CLOTH



POLISH WITH
LIQUID ICE STEP 2 - OEM
AND BLACK FOAM HEAD



WIPE THE SURFACE
WITH **BLUE MAGNET**
MICROFIBRE CLOTH



CLEAN UP WITH **LIQUID ICE**
DETAILER SPRAY



WIPE WITH
BLUE MAGNET
MICROFIBRE CLOTH



www.norton.eu

Saint-Gobain Abrasives
Rue de l'Ambassadeur,
78702 Conflans Cedex,
France

