

NORTON


®

SAINT-GOBAIN





STEP-BY-STEP BUILD GUIDE

nortonabrasives.com




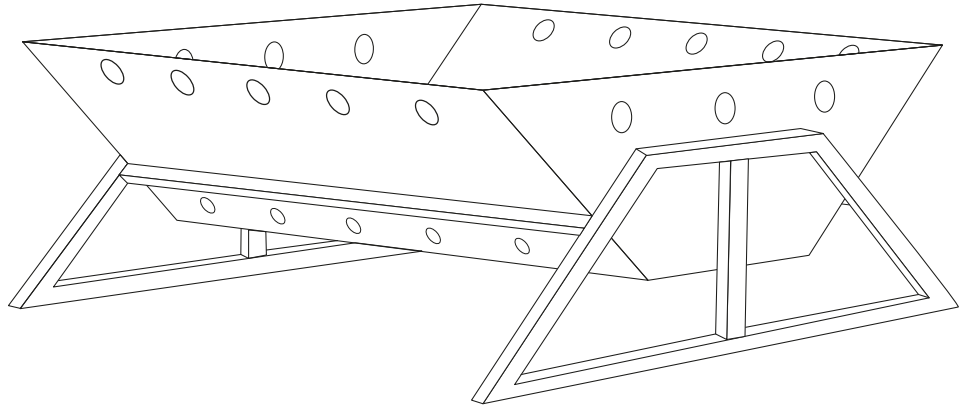


YOU WILL NEED:


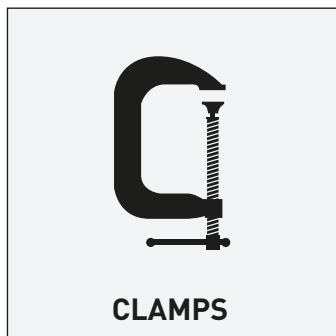


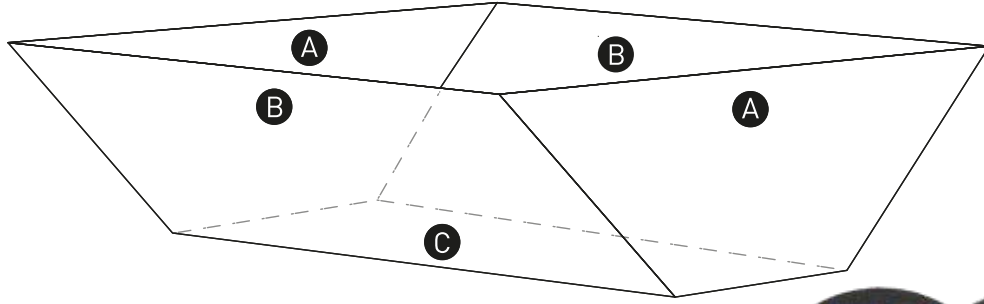



NORTON QUANTUM3
1.3mm CUTTING DISC

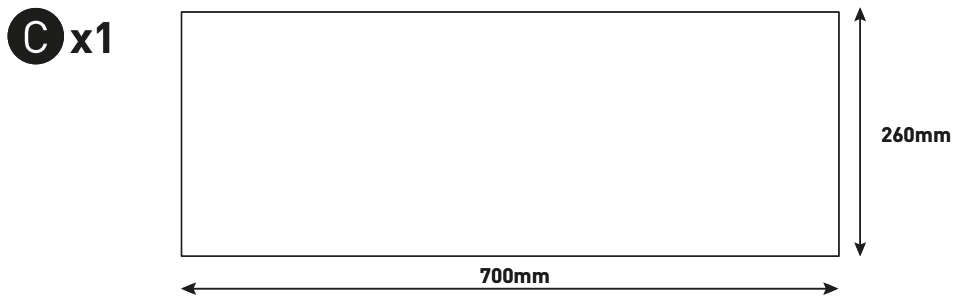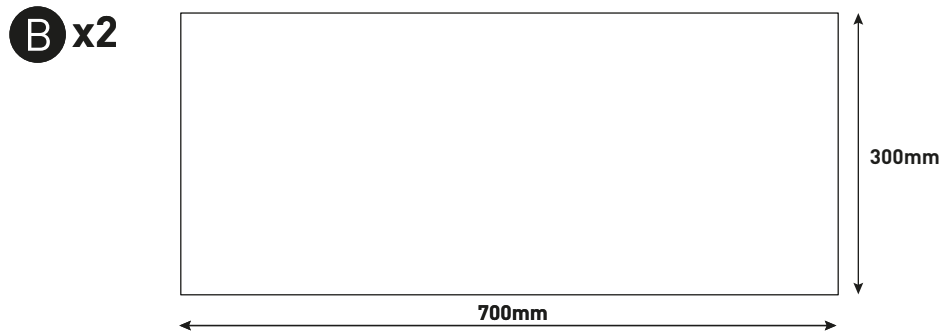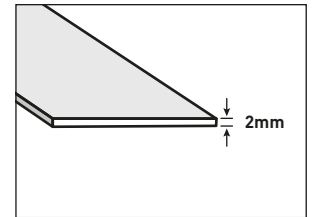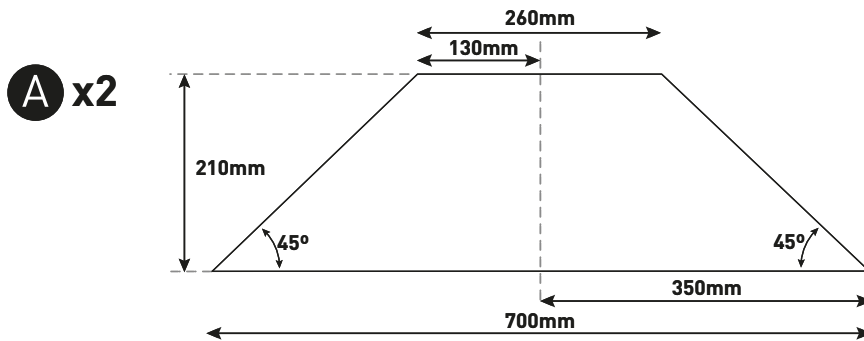


NORTON FLAP DISC
P40/60

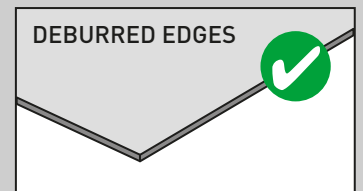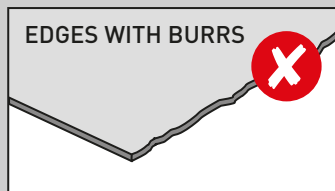



A x2




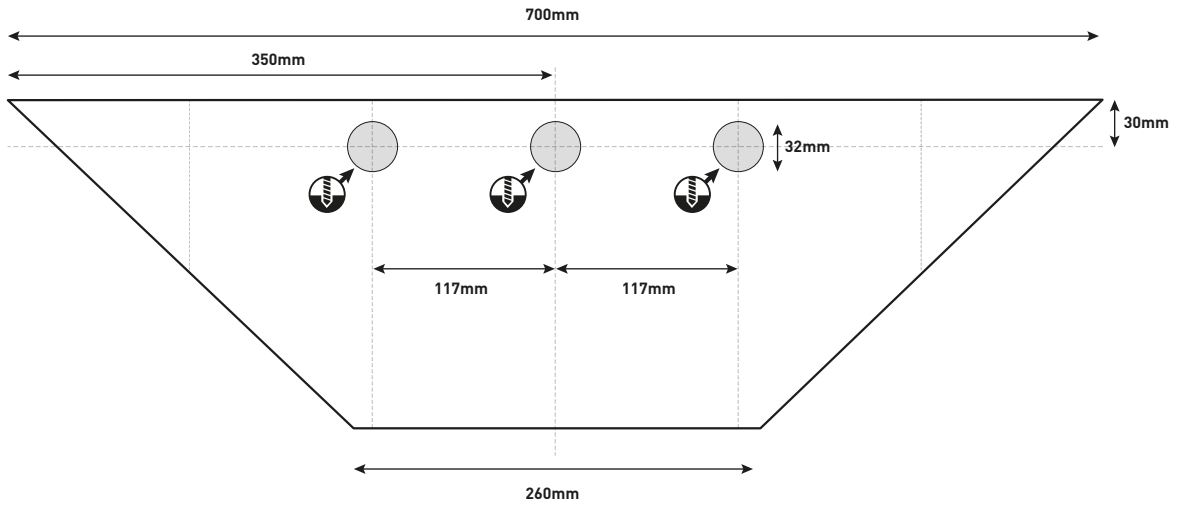
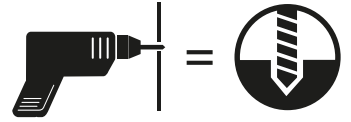





B x2

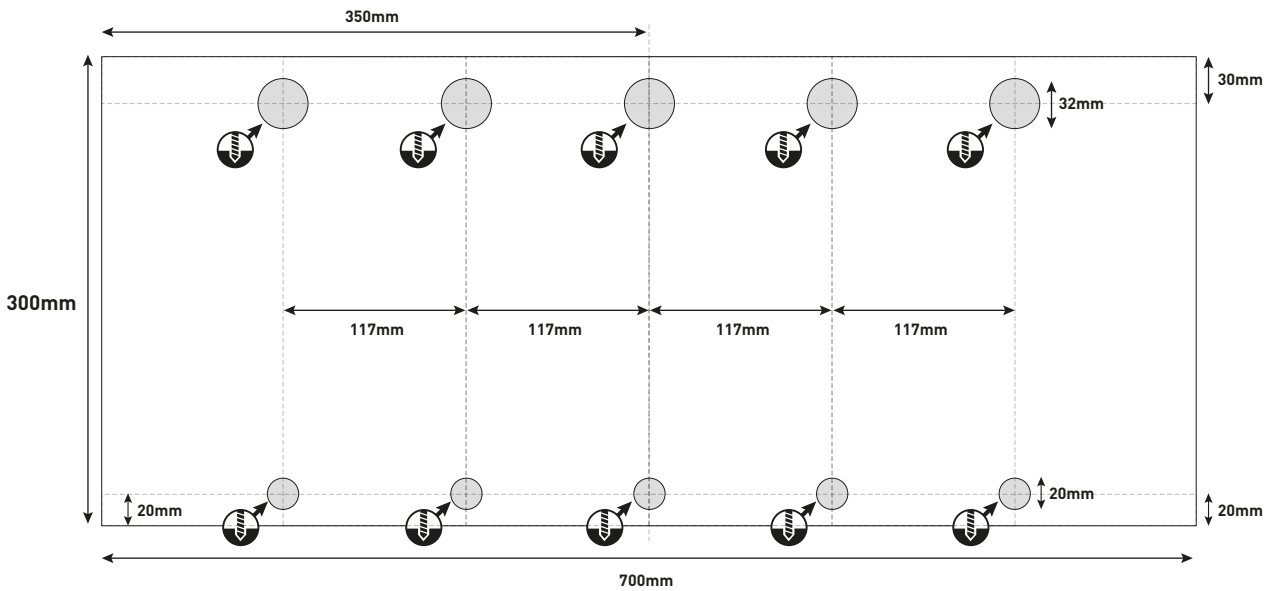



- 1) BLAZE RAPID STRIP DISC
- 2) VORTEX RAPID BLEND

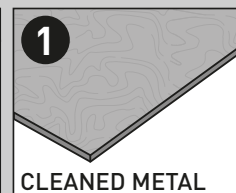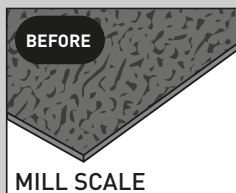


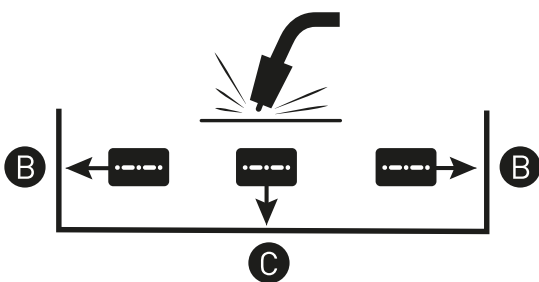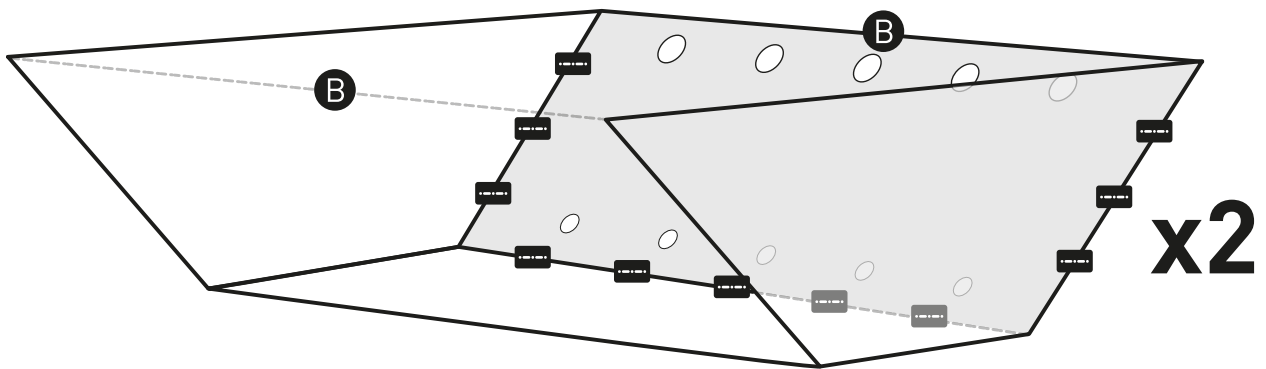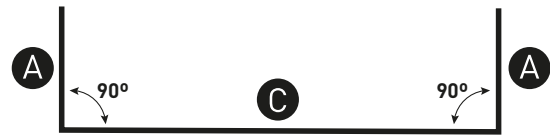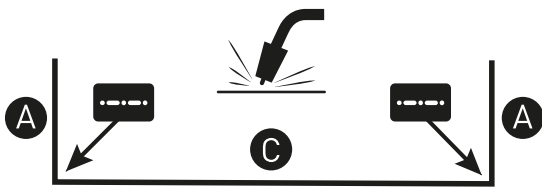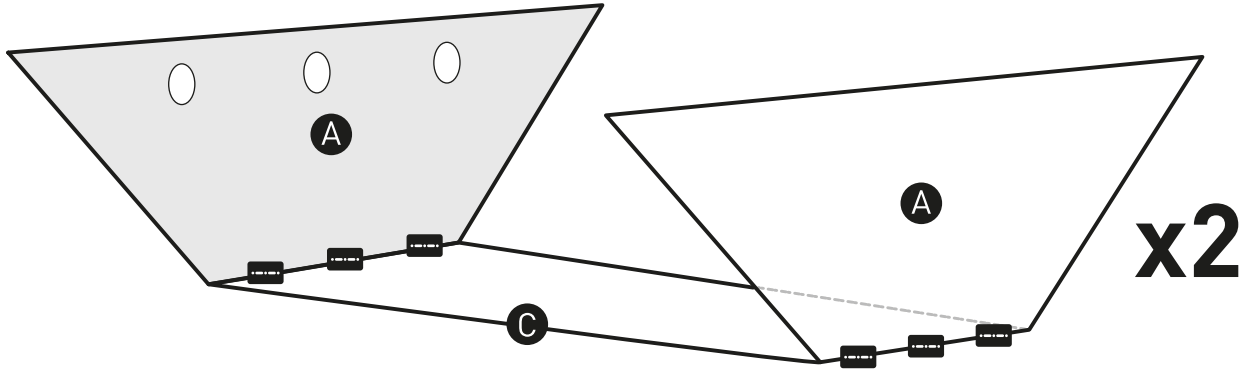

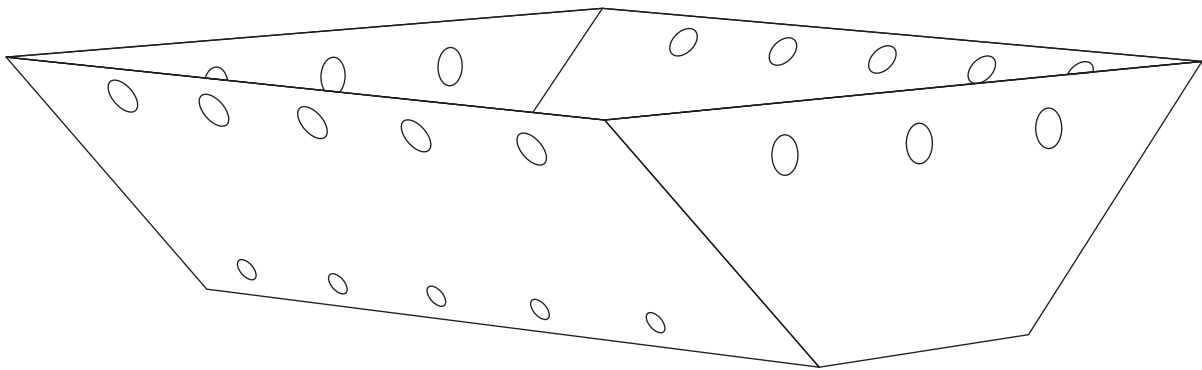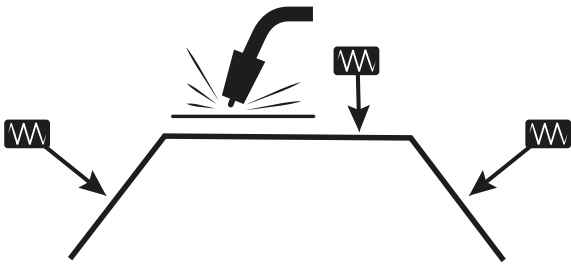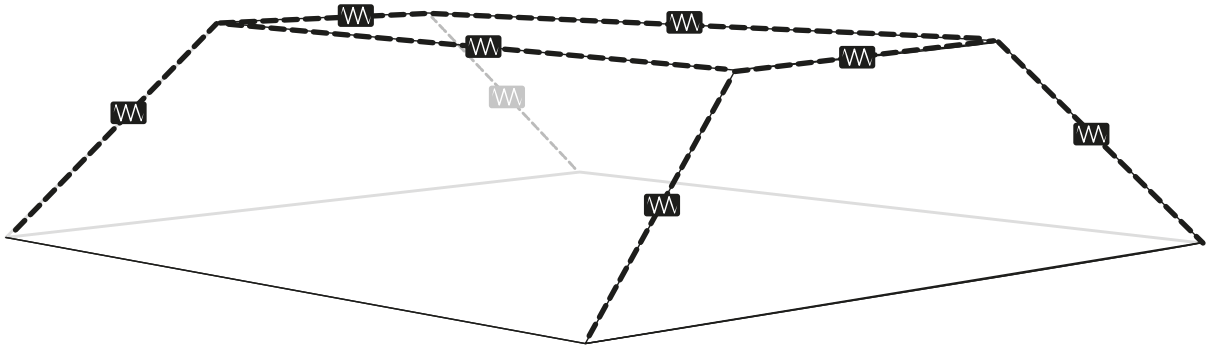


NORTON FLAP DISC
P60


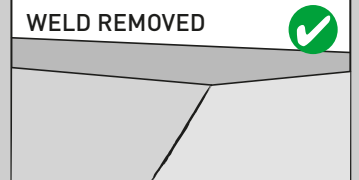
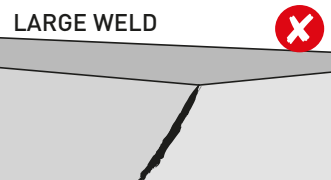


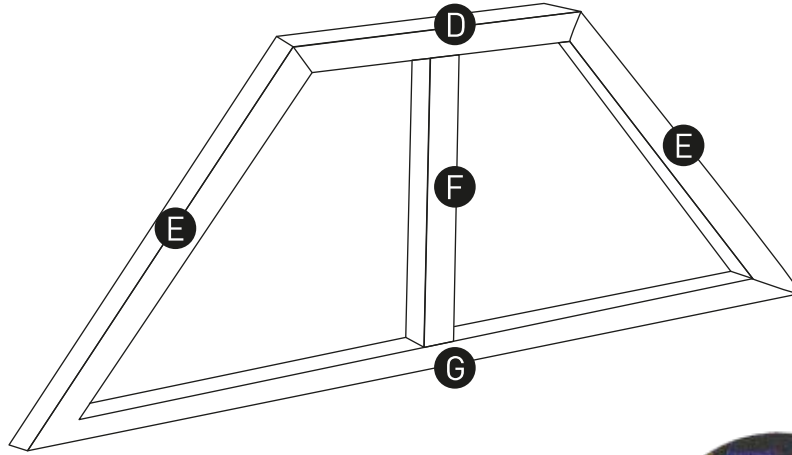



NORTON QUANTUM3
1.3mm CUTTING DISC




D x2

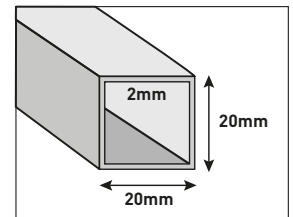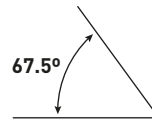


E x4

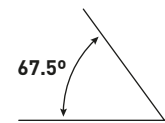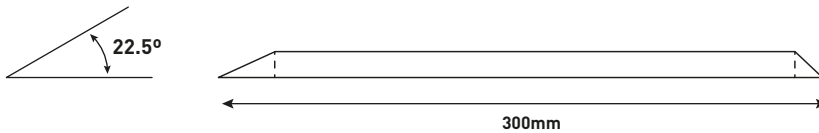


F x2




G x2



NORTON FLAP DISC
P40/60






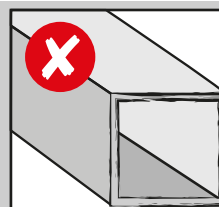


BURRS







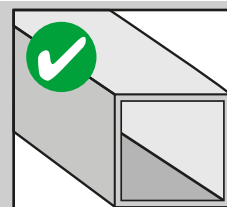


SMOOTH EDGES


- 1) BLAZE RAPID STRIP DISC
- 2) VORTEX RAPID BLEND

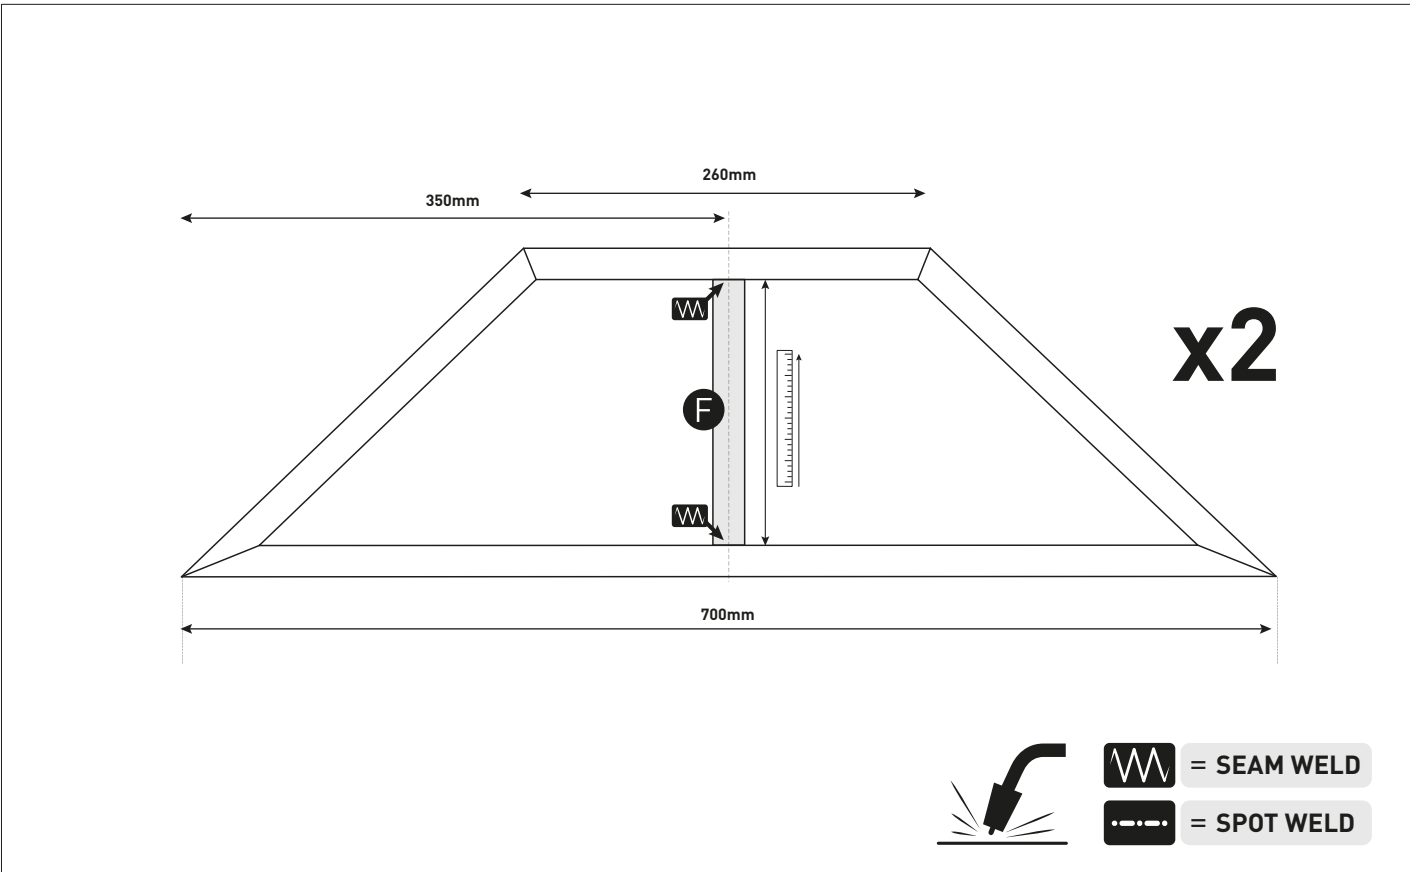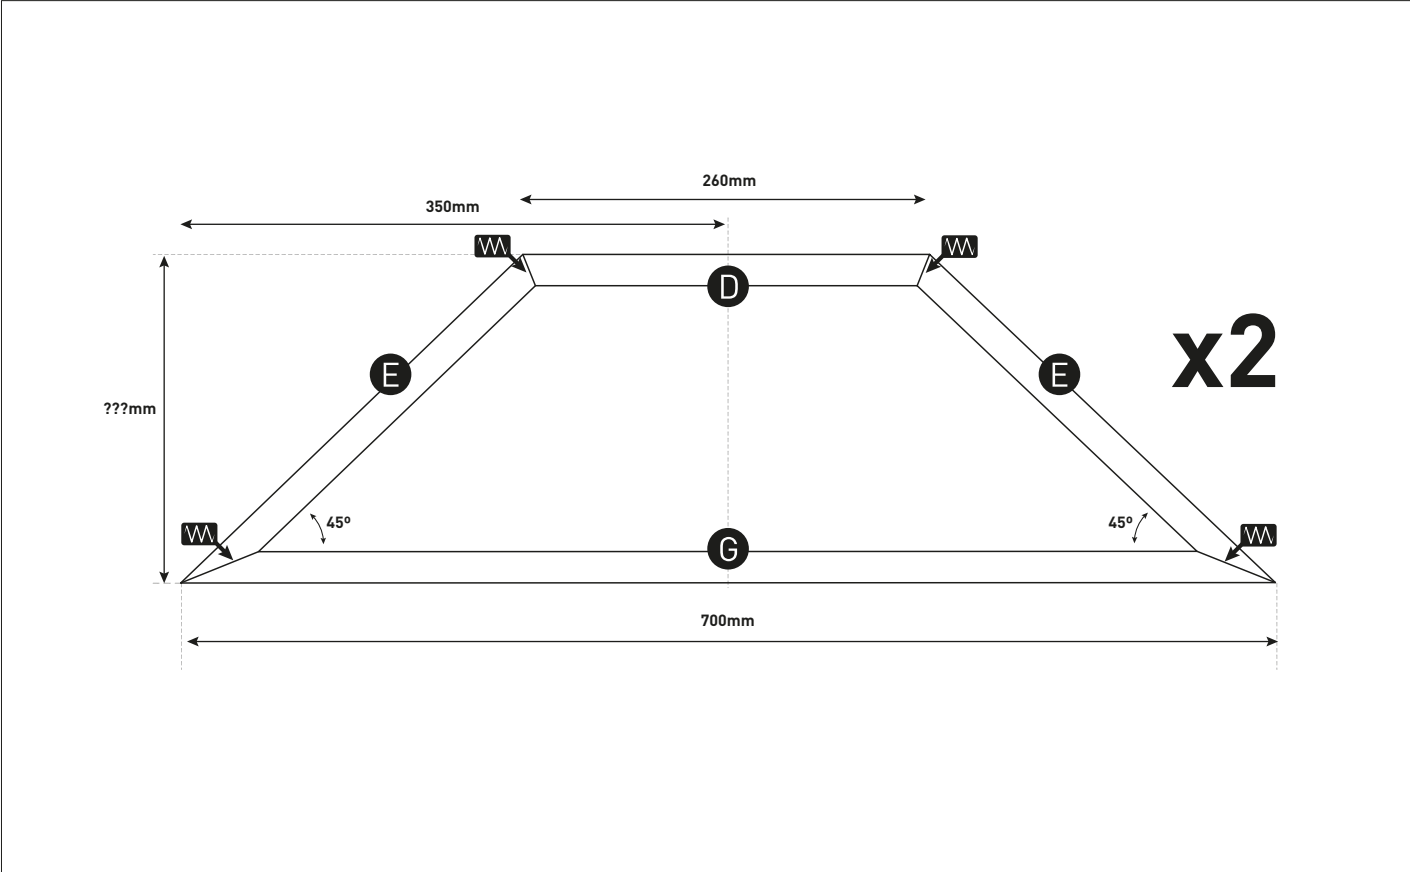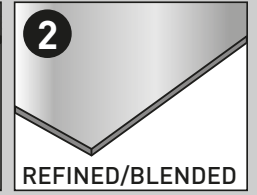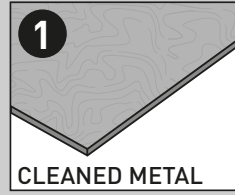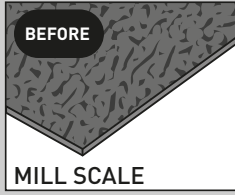

**NORTON FIBRE DISC
P60**

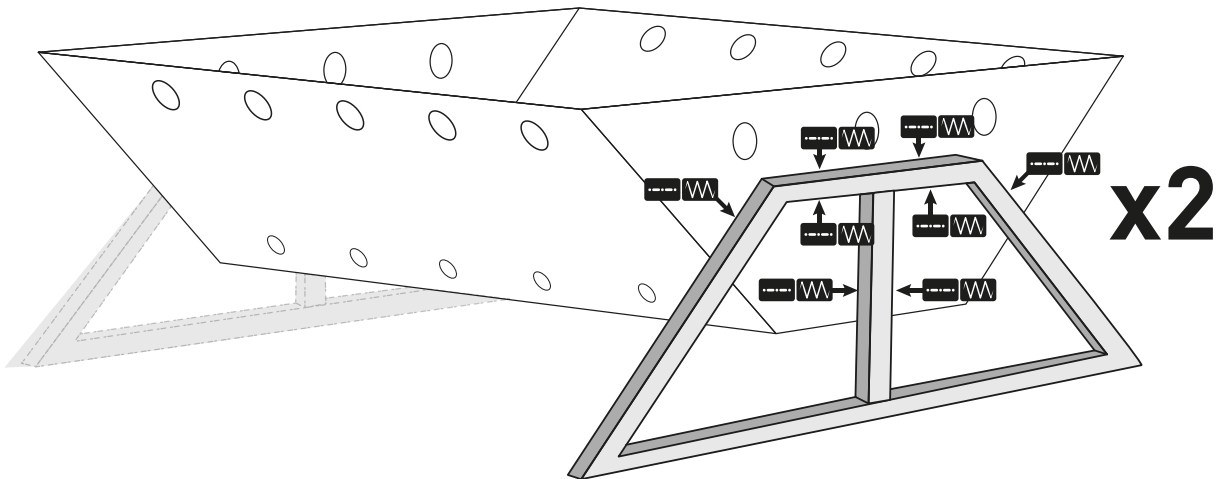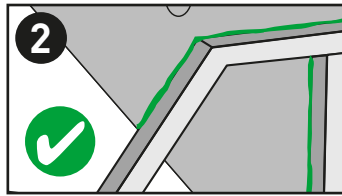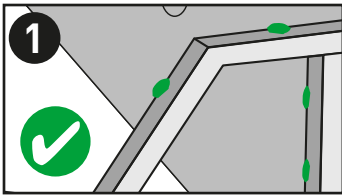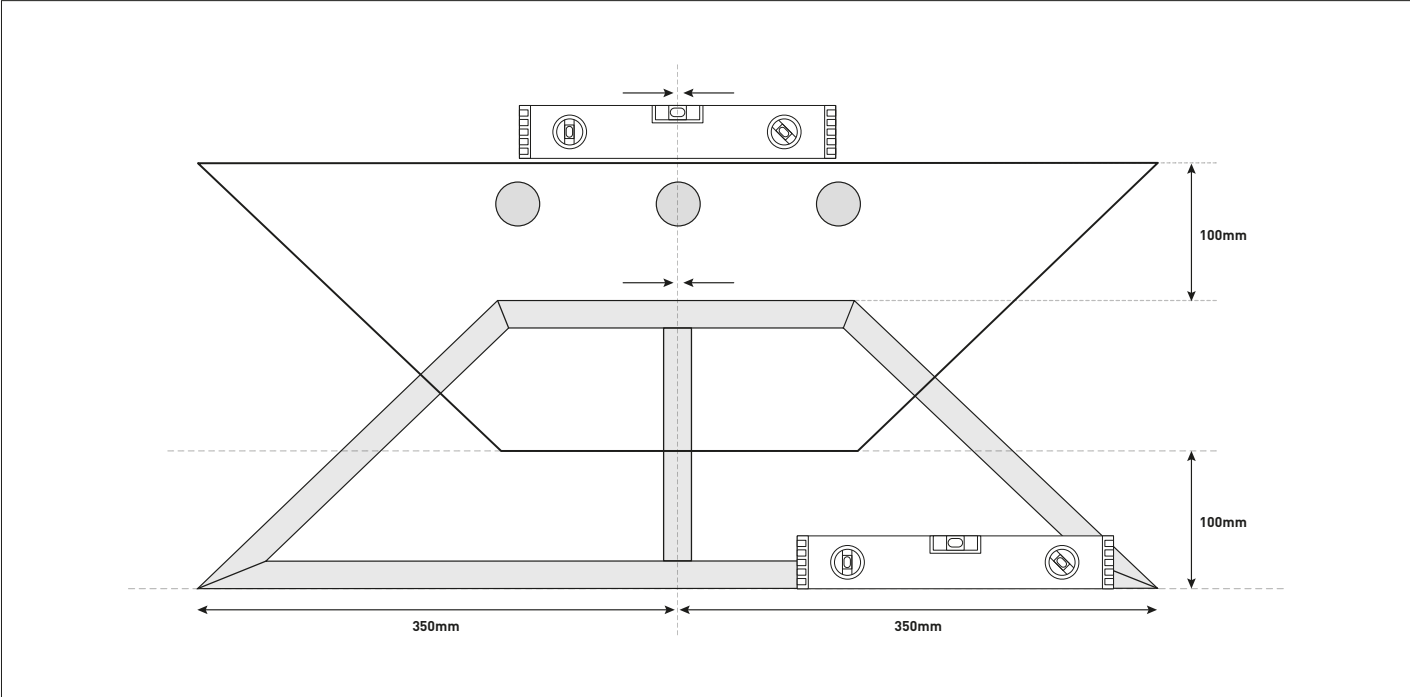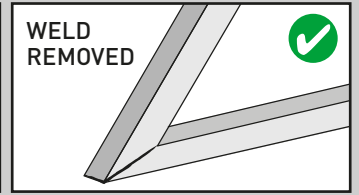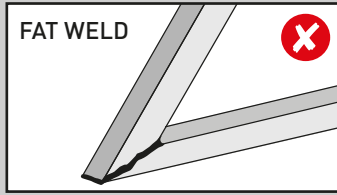



**NORTON FIBRE DISC
P60**

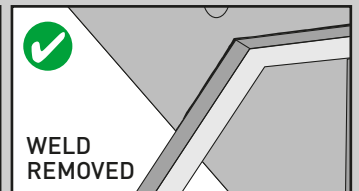





NORTON QUANTUM3
1.3mm CUTTING DISC



H x2

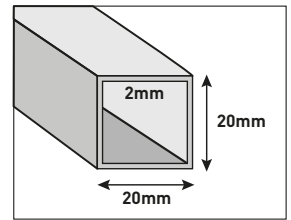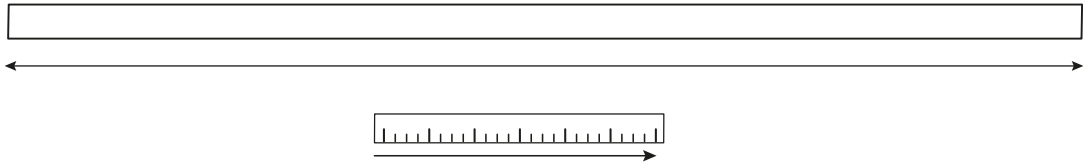


H x2

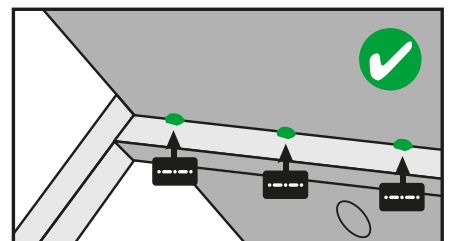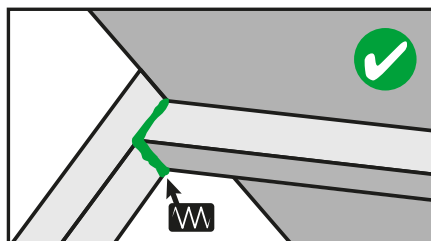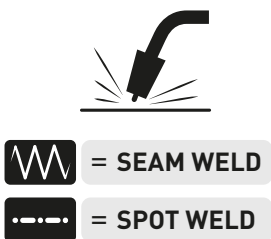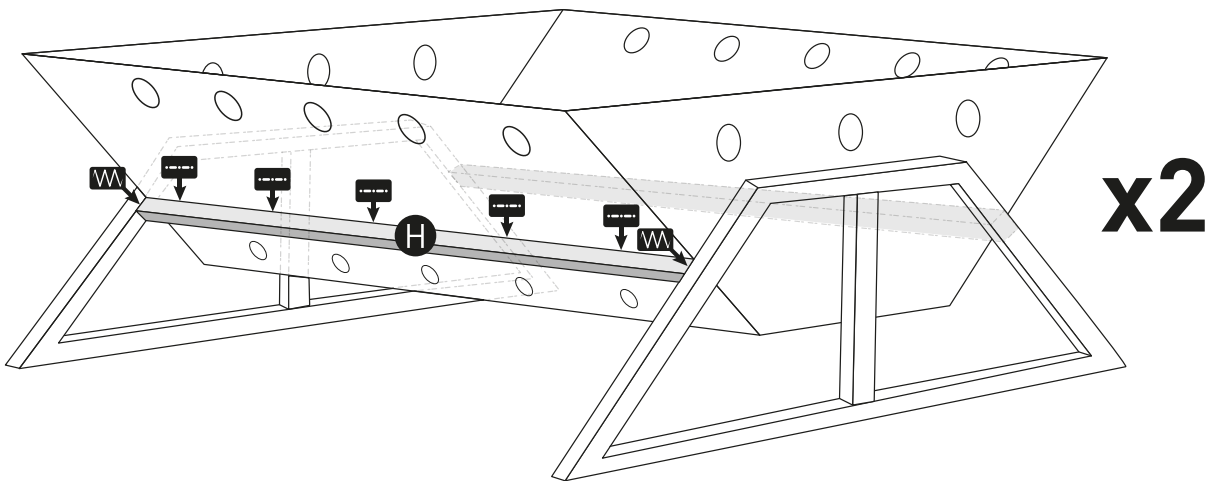

NORTON QUANTUM3
1.3mm CUTTING DISC



J x1

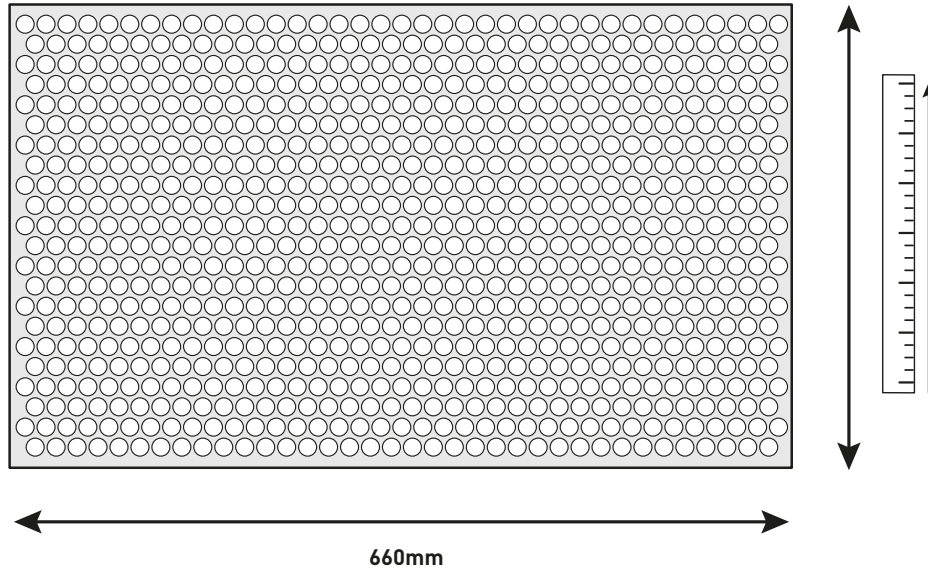

J

